

## Barnes and Noble Nook

### To download Adobe Digital Editions Software

1. Go to [www.adobe.com/products/digitaleditions/](http://www.adobe.com/products/digitaleditions/)
2. Click on **Install** and on **Install** again.
3. Click on **Launch**.
4. Click on the install icon that should appear on the Start Taskbar.
5. Uncheck the boxes you don't wish to see, such as Start Menu Shortcut and Quick Launch Shortcut and click on **Next**.



 
6. Click on **Install**.
7. Click on **Close**.
8. Click on **I Agree**.
9. Click on **Continue**.
10. Click on **Authorize**.
11. Click on **Activate**.
11. Click on **Finish**.

If you don't have an Adobe ID, you will be prompted to register. It's free.

### To download titles


1. Go to <http://kyunbound.lib.overdrive.com>
2. Look at the titles under eBooks, because the format needs to be Adobe PDF or Adobe EPUB eBooks.
  - a. You can click in the **Search** window to search for a specific title. You can also click on **title** to put the titles in alphabetical order to see if the title you're interested in is available. You can also search by creator, release date, most popular, etc.
  - b. At the bottom of the screen, you can click on a letter of the alphabet to refine the search. To scroll through the list, click on **Next**.
  - c. Click on **Advanced Search** to narrow the list to eBook format, which will work with the Nook.
3. If the book is available, you can click on **Add to eCart**.
  - a. If it's not immediately available, you can click on **Place eHold**. Login to your account (See step 5) and type your email address when prompted. You will be notified via email, when it's available.

4. Click on **Continue Browsing**, if you wish to find another title or on **Proceed to Checkout**.
5. Click on the down arrow to choose **Boone County Public Library**.
6. If you haven't already logged in to your account, you will be prompted to do it. Type your **BCPL card number** and your **PIN** or password (generally the last four digits of your Social Security number).
7. Click on **Confirm Checkout**. No more than 10 items may be checked out through KLU at one time.
8. Click on **Download**.
9. Click on **Open**. The title will open with Adobe Digital Editions.
10. Click on **Logout** to logout of KLU.
11. Click on **X** to close Internet.
12. Adobe Digital Editions (ADE) should be open on your desktop.
13. Click on the **Go to Library View** icon on the left (it looks like three books). Plug in the Nook. To transfer a title, click and drag it to middle and once it's there, click and drag it to Nook on the left.

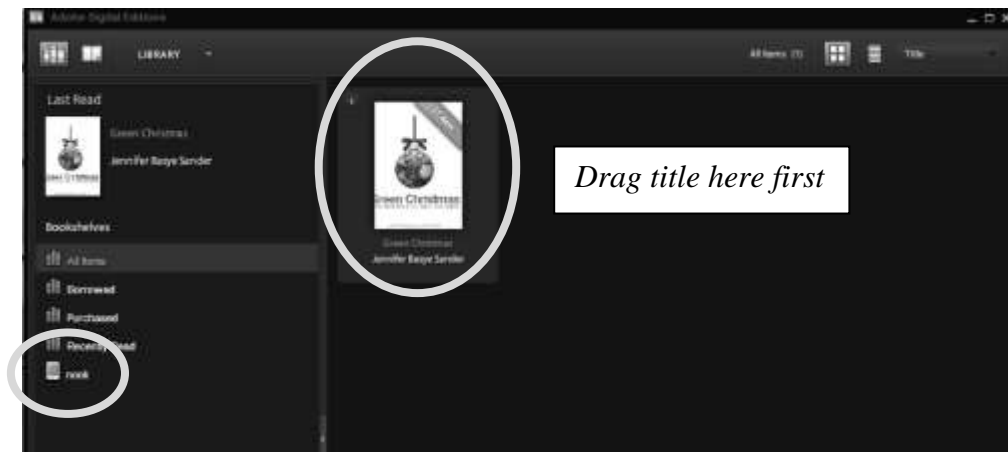


14. Click on the **X** to close ADE.
15. Disconnect the Nook from your computer to read the book. You can also click on the **Go to Reading View** icon (next to Go to Library View in the upper left corner) to read it on your computer.

## Using the Nook

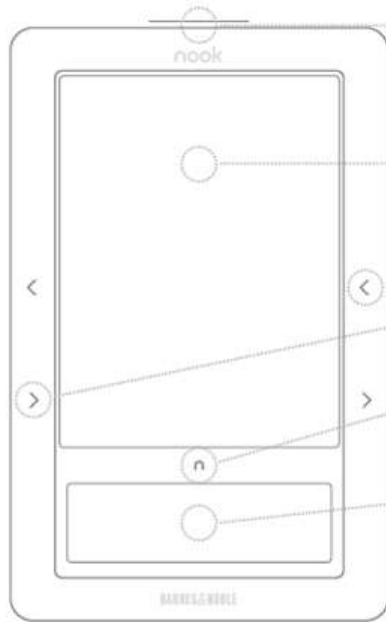 

- **Power Button**  
Press once and release to turn your nook on or to put it to sleep. Press and hold for about 7 seconds to completely power off your nook.
- **Reading Screen**  
This is where you read your eBooks, newspapers, magazines, PDF documents and more. You can also shop Barnes & Noble's eBookstore for great new titles.
- **Page Turn Buttons**  
Turn forward one page or back one page.
- **Home Button**  
Press any time to go to your nook's Home screen and see the *daily*, *my library*, *shop*, *reading now* and *settings*.
- **Color Touchscreen**  
The lower segment of your nook is a Color Touchscreen.

 Use your fingers to turn pages, enter text, navigate through the *daily* and *my library*, shop B&N's eBookstore, review what you are *reading now* or change your preferences in the *settings* area.

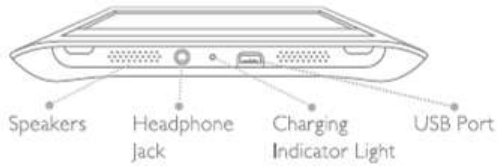

Both items above are included in the package along with your new nook.



### Color Touchscreen Home

The Home screen is your jumping off point to the different areas of your nook. From here you can select:

- the daily*—newspapers, lending notifications, and more
- my library*—all of your eBooks, PDFs, and other downloads
- shop*—Barnes & Noble's eBookstore
- reading now*—shortcut to what you're currently enjoying
- settings*—preferences and user settings



### Color Touchscreen Actions

Use these icons on the Color Touchscreen to:

- ▲▼ Move the cursor up and down on the Reading Screen
- Select an item on the Reading Screen
- ▮ Swipe up and down on the Color Touchscreen to scroll through menus



### Keyboard

The on-screen keyboard automatically appears when any text input is needed. Use it to search for titles in the eBookstore or take notes as you read.

- Touch the Shift key **⇧** to capitalize letters
- Touch the 123 key to see the primary number and punctuation keyboard
- Touch the #+ = key when using the number keyboard to see secondary characters and punctuation marks



### View by Cover

 
Viewing your eBooks is as easy as moving your finger. Swipe across their covers to find the one you want.

## 1. Charge your nook

You must fully charge your nook before using it the first time.

- a) Press the power button on the top of your nook to turn it on.
- b) Plug your nook into a wall outlet.

You can use your nook while it charges. The yellow, charging indicator light illuminates while charging. When the light turns off, your nook is fully charged. Typical charging time is approximately 3½ hours by AC.

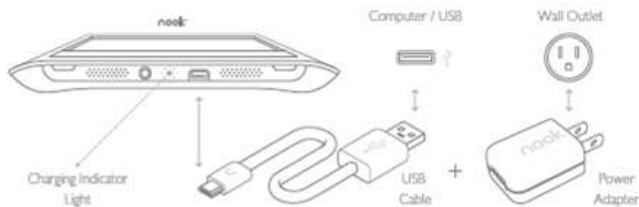

You can also charge your nook by connecting it to a USB port on your computer. Please refer to your User Guide for additional instructions about this feature.

If you experience any problems, please contact Customer Service:

[www.nook.com/support](http://www.nook.com/support)  
Toll-free in the United States: 1-800-THE-BOOK (843-2665)

## To purchase books

### 4. Visit the B&N eBookstore

When your nook is registered, press the Home button and then select shop on the Color Touchscreen to explore the world of eBooks.

You can browse, sample for free and then buy eBooks.

Get today's paper or subscribe to newspapers and magazines.

To purchase an eBook on your nook, find the title, press "Buy," and follow the on-screen prompts. The item will be charged to your account's credit card and automatically download to your nook.



### 5. Read an eBook

When you buy an eBook, it immediately downloads to your nook. Just press read on the Color Touchscreen to open it.

Swipe the Color Touchscreen to turn pages—just like flipping pages in an actual book. If you prefer, use the previous/next page turn buttons on the side of your nook.

From the Home screen, touch my library to see your eBooks, newspapers and magazines already saved on your nook.

Go to [www.nook.com](http://www.nook.com) for tutorials and tips on how to make reading more enjoyable than ever before!



**Note:** You can also download FREE classic books from sites like Project Gutenberg – [www.gutenberg.org](http://www.gutenberg.org)