

# Sony Reader – PRS-T1 with Wi-Fi

**Using the Sony Reader** (for full instructions - <http://esupport.sony.com/docs/reader/PRST1/eng/index.html>)

Turn on the Reader by pressing the Power button on the bottom of the device.

Turn off the Reader by pressing the Power button and tap on Yes to power off.




The power cord can be plugged into an AC outlet or remove the end adaptor to use as a USB connector for your computer.

## Applications and the [Home] Screen

Press the (Home) button to display the [Home] screen. The [Home] screen has the following applications.

Applications appear on the first and second page of the [Home] screen. The displayed icons may vary depending on the country/region setting.

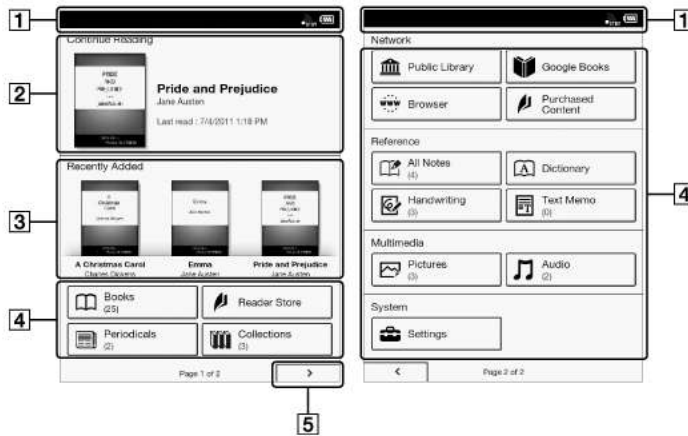

- 1] Status bar
- 2] Last read book/periodical
- 3] Newly added books
- 4] Applications
- 5] Navigate to the second page of the [Home] screen

 









### Tip

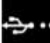- The most recent book/periodical that you opened is shown under [Continue Reading] on the first page of the [Home] screen. Tap it to continue reading where you previously left off.
- The three most recent books that have been added to the Reader are displayed under [Recently Added] on the first page of the [Home] screen. Tap one to start reading it.

Application	Description
[Books]	Lists all the books/transferred content in the Reader and, if inserted, the microSD card. See Details.
[Reader Store]*	Enters Reader Store. You can find featured titles, bestsellers, new arrivals and more. See Details.
[Periodicals]*	Lists all the periodicals in the Reader and, if inserted, the microSD card. See Details.
[Collections]	Lists preset and user-created collections. See Details.
[Public Library]*	Shows you and public libraries where you can borrow books for the Reader. See Details.
[Google Books]*	Takes you to Google Books.
[Browser]	Launches the Web browser. See Details.
[Purchased Content]*	Takes you to [My Account] Store for downloading your purchased books and periodicals. See Details.
[All Notes]	Shows all the bookmarks/annotations made on the books and periodicals. See Details.
[Dictionary]	Allows you to look up a word in the dictionary. See Details.
[Handwriting]	Allows you to use a drawing pad for drawing. See Details.
[Text Memo]	Allows you to use a notepad for typing memos. See Details.
[Pictures]	Shows pictures in the Reader and, if inserted, the microSD card. See Details.
[Audio]	Lists and plays the albums and songs that you have in the Reader. See Details.
[Settings]	Displays the items for setting the Reader. See Details.

## Status bar


The status bar shows the current status of the Reader, such as Wi-Fi status, the battery level and the status of downloading files from Reader Store. The following items are displayed in the status bar.

Icon	Indication
	Connected via the USB cable.
	Connecting to a network.
	A download is in progress. When multiple downloads are in progress, the number of downloads is displayed next to this icon.
	A download has completed.
	If downloading fails, the  (Fail) icon is displayed. The icon disappears when you open the notification window and tap [Clear], or when you tap the downloaded items in the [Notification] list.
	An audio track is currently being played.
	Updating database.
	Wi-Fi network signal strength. See Details.
	Current battery level. See Details.

### Note

- Depending on the situation, not all icons will be displayed at once.


### Tip

- When you press the  (Menu) button from the [Home] screen, the time is displayed at the left side of the status bar for approximately 5 seconds.

## Notification window

Tapping on the status bar reveals the notification window, which contains network-related items and other current operations.



Item	Description
[1]	Turn [Wi-Fi] on/off
[2]	Go to the [Wi-Fi Settings] screen
[3]	Displays the status of items that are downloading from Reader Store or the Web.
[4]	Displayed when an audio track is currently playing. Tap to jump to the audio player
[5]	Enter data transfer mode
[6]	Item for which downloading has completed. Tap to open the item.
[7]	Displayed when notifications are displayed. Tap to clear the notification list. The (Download complete) icon also disappears from the status bar. 

Depending on the status of the Reader, other items may also appear in the notification window. Press the  (Menu) button to close the notification window.

### **First time use**

To begin using the Sony Reader for online purchases or downloading free books, go to [ebookstore.sony.com/download](http://ebookstore.sony.com/download) and follow the instructions to register your device. Make a note of the User ID and password for future reference.

### **To download titles from Kentucky Libraries Unbound**

1. On the Main screen, tap the **arrow in the lower right corner** to get to page two of the menu options.
2. Tap on **Public Library**.
3. Type **boone county public library** and tap on the **Search** button.
4. Tap on **Boone County Public Library**.
5. Tap on **Kentucky Libraries Unbound**.
  - a. You can bookmark this page by tapping on the heart in the upper right corner. To get back to it, tap on the heart.
6. **Do a search or browse** for titles. Type the author's last name or title of the book. Tap **Next** to see the next result on the list.
7. To download a book, tap on **Add to eCart**.
  - a. If the book is not available, tap on Place eHold and follow instructions to be notified by email when the title is available.
8. Tap on **Continue browsing or Proceed to checkout**. (If a security message appears, tap on Continue).
9. To login to your account, tap on **Select Library**.
10. Tap on **Boone County Public Library**.
11. Type your **library card number** (tap on the number button in the lower left corner) and password. Tap on **Login**.
12. Slide the screen upward, if necessary to tap on the **Confirm Checkout** button.
13. Tap on **Download**. This step may take a while, so be patient.
14. When the download is complete click on Logout. The title will appear on the Main screen as a "New" item.

### **To read a book**


1. Press the **Home** button, if necessary.
  - a. On this Sony Reader, you can tap on a Recently Added book or choose a book from Books, Collections, etc.
2. Tap on the **title of the book** and **swipe to the left** to turn the pages. You can also use the arrow keys on the device to turn pages.
  - a. To change the font size, press the Menu button on the lower right of the device, tap on Font, and tap on the desired size. Press the Menu button again to exit.

### **To return a book early**

1. Press the **Home** button to get to the main screen, if necessary. Tap on **Books**, then press the Menu button on the device, and tap on **Return Books**.
2. Tap on the book to select it and a checkmark will appear in the box on the lower right corner.
3. Tap on **Done** and then on **Yes** to confirm the return.

## **Purchasing materials online** (you need to create account and use a credit card)



### **Accessing the Reader Store**

To download titles at the Reader Store with a Wi-Fi connection, press the  (Home) button and tap on Reader Store.

### **To purchase items**

1. Sign in to your account using your email address and password.
2. Select or search for the title you wish to purchase.
3. Follow the Reader Store instructions to complete your purchase. The Reader will begin downloading the title shortly after you complete the checkout process

### **Navigating Reader Store**

To return to the previous page of Reader Store, press the  (Back) button. Pressing the  (Menu) button allows you to display the options items for navigation.

<b>Navigation method</b>	<b>Description</b>
Store Home	Go to the top page of Reader Store.
My Account	View your purchase history and re-download purchased content.
Refresh / Stop	Updates the content displayed on the Reader Store page, or stops loading the page.
Forward	Advances to a previously viewed page.
Continue Reading	Closes the Reader Store application and returns to the last read page of your last read book.
More	Displays more option items.
Help and Support	Jumps to the FAQ page of Reader Store.
Legal Information	Displays legal information about Reader Store.

### **Checking downloaded content**

You can check the download progress in the status bar and by tapping on it.

When you exit the Reader Store, the three most recent purchases will be displayed under Recently Added on the Home screen.

- You can check all purchased content in the Books or Collections applications.
- Newspapers and magazines are stored in Periodicals.
- You can directly access content that you have purchased by going to My Account at the Reader Store and view Purchased Content.